



Before Application


* Make sure you have 1 tape, 2 trays and 2 rollers
 You can buy from the local store or order the Installation Kit from www.escreo.com

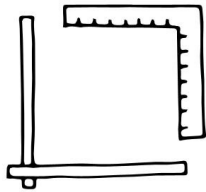

Measure and frame with tape

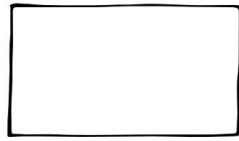

Ensure that the surface is smooth and even, if necessary lightly sand

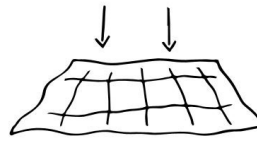

Place the protecting cover sheet for floor & furniture



Put on gloves

1



Shake the primer for 1 minute

2



Open the primer

3




Pull the save cap

4




Pour it in tray 1

5

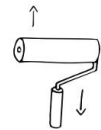


Use roller 1 to distribute primer evenly

6

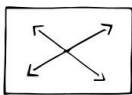


Make sure there is no undistributed area

7

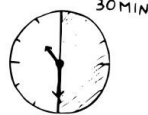


Wait 30 minutes

8

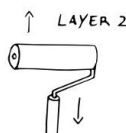

Use roller 1 to distribute 2nd layer primer evenly

9

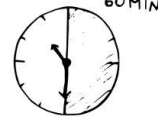

Wait 60 minutes

10



Open tin A with the tin opener

11



Open tin B

12




Pull the save cap

13




Mix B in A

14

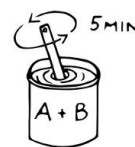


Stir for 5 min. with the tin opener

15

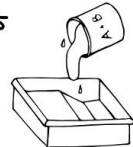


Pour half of the liquid in tray 2

16

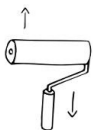


Use roller 2 to distribute paint evenly

17

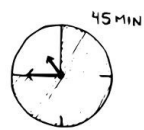


Wait 45 minutes

18

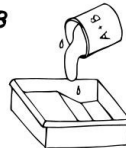

Pour the other half of the liquid in tray 2


19

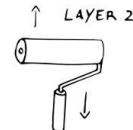

Use roller 2 to distribute 2nd layer paint evenly

* Don't leave the paint mixed for more than 2 hours


After Application

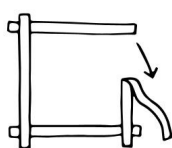


Remove the tape



Open the window if possible

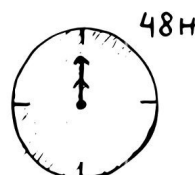

Let it dry for 48h

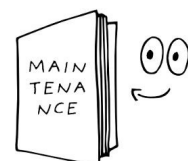

Read the Maintenance Guidelines