


Before Application

*** Make sure you have 1 tape, 3 trays and 3 rollers**


You can buy from the local store or order the Installation Kit from www.escreo.com

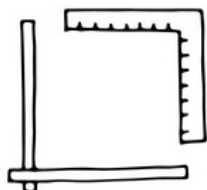

Measure and frame with tape



Ensure that the surface is smooth and even, if necessary lightly sand

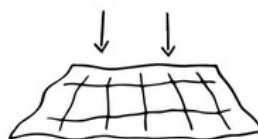

Place the protecting cover sheet for floor & furniture



Put on gloves




1 Open the magnito tin with the tin opener



2 Stir for 1 min. with the tin opener




3 Pour in tray 1

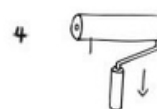


4 Use roller 1 to distribute paint evenly




5 Make sure there is no undistributed area

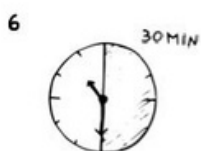


6 Wait 30 minutes

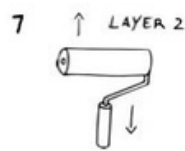


7 Use roller 1 to distribute 2nd layer of paint evenly

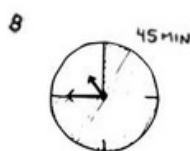

8 Wait 45 minutes

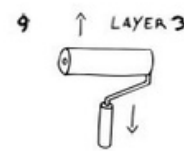

9 Use roller 1 to distribute 3rd layer of paint evenly

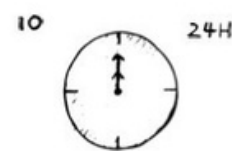

10 Wait 24 hours



11 Shake the primer for 1 minute




12 Open the primer




13 Pull the save cap




14 Pour in tray 2

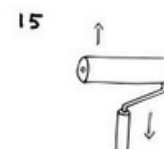


15 Use roller 2 to distribute primer evenly

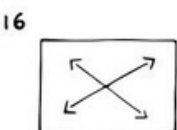


16 Make sure there is no undistributed area

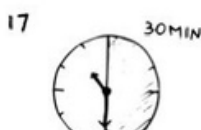

17 Wait 30 minutes

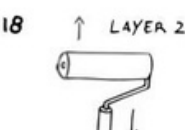


18 Use roller 2 to distribute 2nd layer of primer evenly

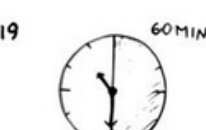

19 Wait 60 minutes

Apply the color of your choice


After Application

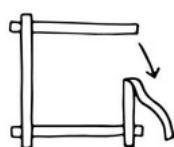

Remove the tape



Open the window if possible

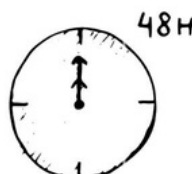


Let it dry for 48h




Read the Maintenance Guidelines

If you want to write on the magnetic wall, use ESCREO White/Clear

Before Application

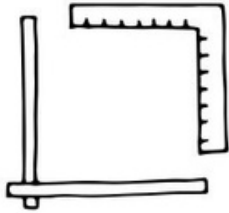

Measure and frame
with tape

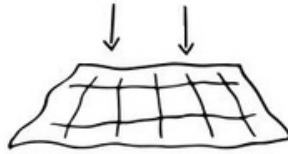

Place the protecting
cover sheet for
floor & furniture



Put on gloves




Open tin A with the
tin opener




Open tin B



Pull the save cap

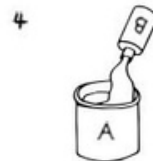


Mix B in A

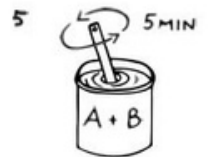


Stir for 5 min. with the
tin opener



Pour half of the liquid
in the 3rd tray

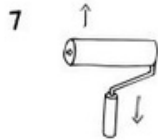


Use roller 3 to
distribute paint evenly

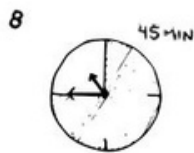

Wait for 45 minutes




Pour the rest
in the 3rd tray

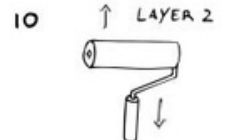

Use roller 3 to
distribute 2nd layer of
paint evenly

*** Don't leave
the paint mixed
for more than 2h**


After Application

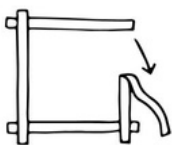

Remove the tape



Open the window
if possible

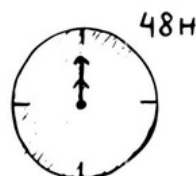

Let it dry for 48h



Read the
Maintenance Guidelines